

Legacy Brass, Inc

ROMAN TUB (DECK) FAUCET w/ FIXED NIPPLE INSTALLATION SHEET

It is recommended that only licensed plumbers with knowledge of installing decorative plumbing products be employed to install Legacy Brass products. Failure to do so may cause product malfunction and needless additional cost.

INSTALLER NOTICE: Do not use plumbers' putty to install this product. The use of plumbers' putty will void the homeowner's finish warranty. We recommend using a clear silicone sealant and teflon tape around threaded parts.

VERY IMPORTANT!!! Prior to installing the valves, it is critical that the supply lines be completely flushed of all dirt and debris.

ROUGH INSTALLATION:



1) Install the HOT and COLD valves (plus DIVERTER valve, if provided) according to the Dimension Guide. All other parts can be installed only when the trim is installed. It is recommended that the valves be hard plumbed with copper tubing, but hoses can be used. **Hoses, tees and other plumbing parts are not provided by the manufacturer.** If this is a 2-valve set, bring the hot and cold water directly from the valves to the spout using a 3/4" tee. If this is a 3-valve set (with a diverter) bring the hot and cold water from the valve to the diverter valve (there are two inlets) and plumb to the spout from the 3/4" outlet. Install the 24", high pressure, stainless steel braided hose to the 1/2" outlet for installation to the handshower.

TRIM INSTALLATION:


1) Insert the spout into the 1 1/4" diameter hole and mount from underneath the deck and connect to the water supply.
2) Screw the escutcheons onto the valves and then install the handles at their preferred positions and tighten the handle set screws with the allen wrench provided.

(For Hand Showers)

3) Install the hand shower escutcheon onto the deck. Remove the mounting nut and washer. Insert the escutcheon from the top side of the deck, mount the washer and nut onto the bottom of the nipple and tighten.
4) Slide the decorative hose (end with the hex nut) through the escutcheon and connect to the 24" pressure hose.
5) Connect the other end of the decorative hose (with the cone-shaped nut) to the hand shower itself.
6) Check for leaks and tighten connections, if necessary.

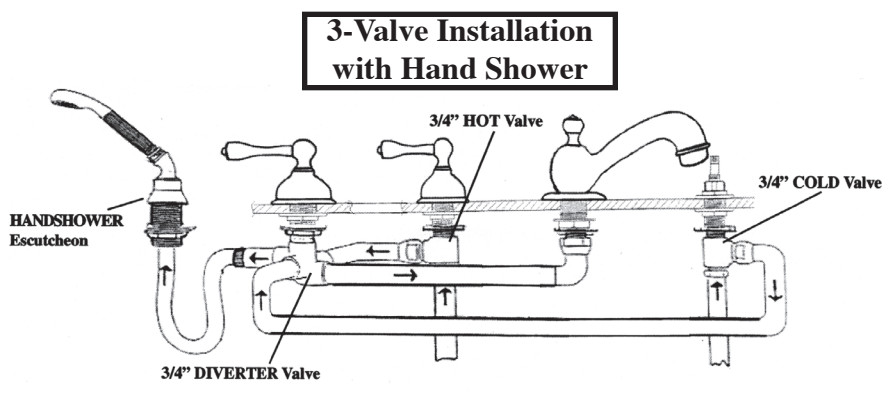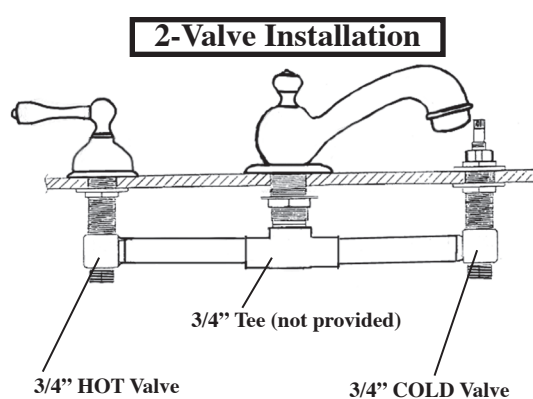

DIMENSION GUIDE									
Series	Height	Series	Height	Series	Height	Series	Height	Series	Height
1307,8	2 5/8"	3707,8	2 1/2"	3907,8	2 1/4"	4107,8	2 1/4"	4257,8	2 1/2"
1357,8	2 1/2"	3807,8	2 1/2"	3957,8	2 1/4"	4157,8	2 1/4"	4407,8	2 1/2"
1407,8	2 5/8"	3857,8	2 1/2"	4007,8	2 1/8"	4207,8	2 1/2"	4457,8	2 1/2"
1457,8	2 1/2"			4057,8	2 1/8"				

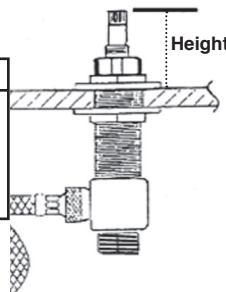

INSTALLER Important Cleaning Notice

Please refer to *Care & Maintenance Instructions* for complete cleaning instructions. **Never clean with abrasives, acids or detergents.** Wipe with soft, damp cloth.