


Legacy Brass, Inc

THERMOSTATIC VALVE EXTENSION KIT

INSTRUCTION SHEET

It is recommended that only licensed plumbers with knowledge of installing decorative plumbing products be employed to install Legacy Brass products. Failure to do so may cause product malfunction and needless additional cost.

INSTALLER NOTICE: Do not use plumbers' putty to install this product. The use of plumbers' putty will void the homeowner's finish warranty. We recommend using a clear silicone sealant and teflon tape around threaded parts.

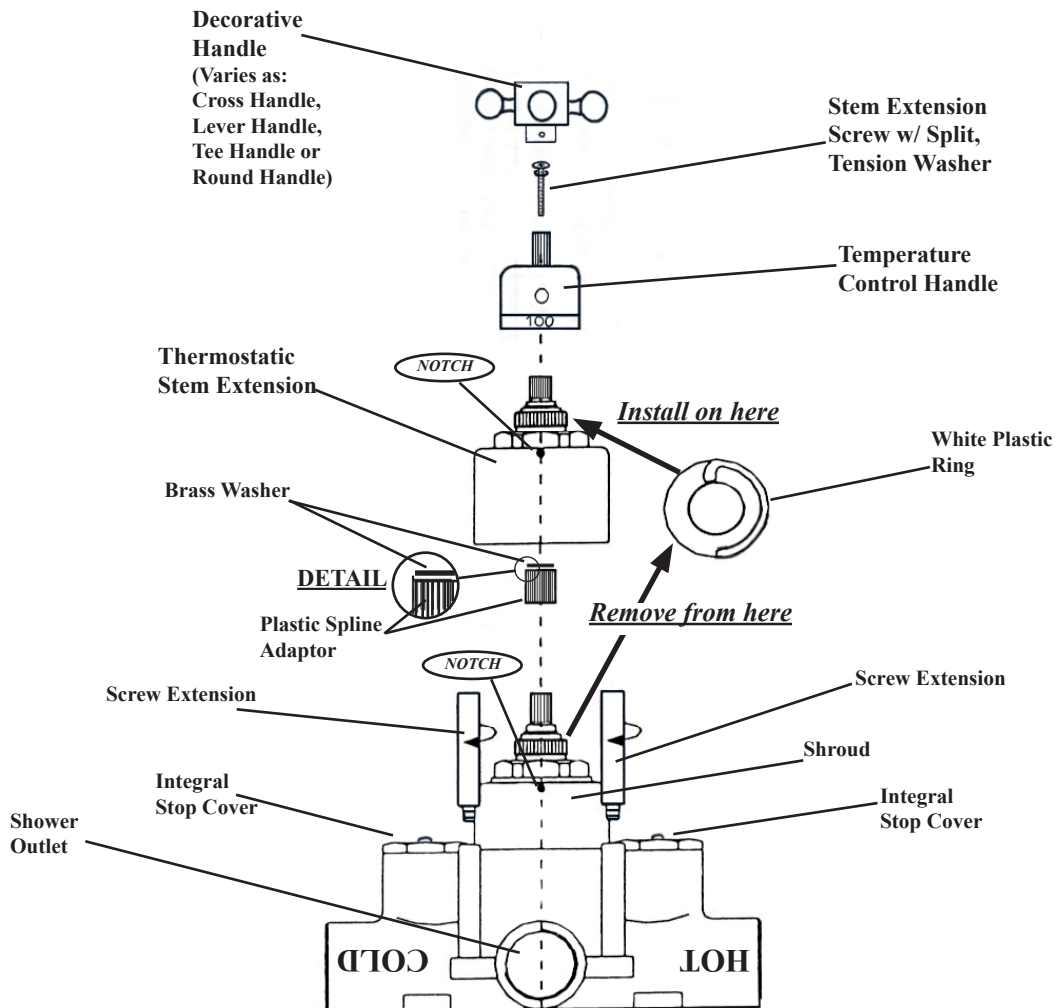

- 1) Remove decorative handle and Temperature Control Handle, if already installed.
- 2) Remove the White Plastic Ring from the top of the valve and transfer it to the Thermostatic Stem Extension, aligning the red dot with the notch on the Stem Extension.
- 3) Insert the two Screw Extensions into the holes on either side of the Shower Outlet.
- 4) Put the Plastic Spline Adaptor onto the stem of the valve. Be sure the brass washer is inserted into the top of the Spline Adaptor.
- 5) Insert the Thermostatic Stem Extension onto the Plastic Spline Adaptor with the **notch aligned with the notch on the Shroud**.
- 6) Install the Temperature Control Handle onto the stem of the Thermostatic Stem Extension with the red button aligned with the notch of the Stem Extension.
- 7) Insert the Stem Extension Screw, with the Split, Tension Washer on it, through the stem of the Temperature Control Handle and tighten it to the valve stem.
- 8) Replace the Decorative Handle onto the stem and tighten the set screw(s).

21000 S. Wilmington Ave., Carson, CA 90810

Tel: 310-548-9004 Fax: 310-548-9175

Toll-Free Telephone 866-699-7099

Website: www.legacybrass.com