

# Legacy Brass, Inc




## 3-VALVE BIDET SET INSTALLATION SHEET

*It is recommended that only licensed plumbers with knowledge of installing decorative plumbing products be employed to install Legacy Brass products. Failure to do so may cause product malfunction and needless additional cost.*

**INSTALLER NOTICE:** Do not use plumbers' putty to install this product. The use of plumbers' putty will void the homeowner's finish warranty. We recommend using a clear silicone sealant and teflon tape around threaded parts.


Typical Installation with Diverter at the Back

- 1) Remove trim from the diverter valve and remove the inverted nut, nylon ring and upper rubber seal.
- 2) Screw the 90° ell, with the arrow pointing away from the valve, into the diverter valve.
- 3) Insert the diverter valve from the bottom through the appropriate hole and re-install the upper rubber seal, nylon ring and hand tighten the inverted nut. Connect Supply "Y".
- 4) Install the douche spray from the top and tighten from underneath.
- 5) Install the pop-up guide and knob with the rod.
- 6) Install the HOT and COLD valves. Adjust the stem height according to the chart below.
- 7) Connect supply hoses between the valves and "Y" connector and connect the douche hose from the ell to the douche spray.
- 8) Install the drain by:
  - a) removing the flange, washers and nut from drain assembly, applying a sealant to the underside of the flange and inserting it into the drain hole of the sink.
  - b) installing and tightening the washers and nut from the underside and then screwing the body onto the flange, so that the ball rod outlet faces directly toward the back wall.
  - c) inserting the ball rod into its outlet and inserting the drain plug into the flange, aligning it with the ball rod. Tighten the nut on the ball rod outlet.
  - d) connecting the ball rod to the pop-up rod using the strap and the V-clip.
- 9) Install the bidet diverter trim parts. Install escutcheons onto the valve bodies. Install handles onto stems and tighten set screws.

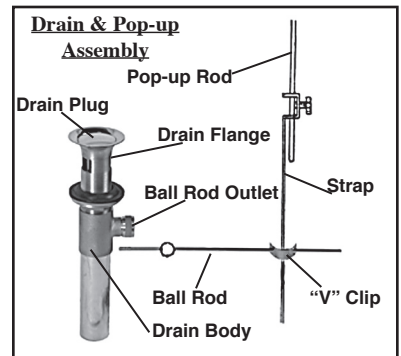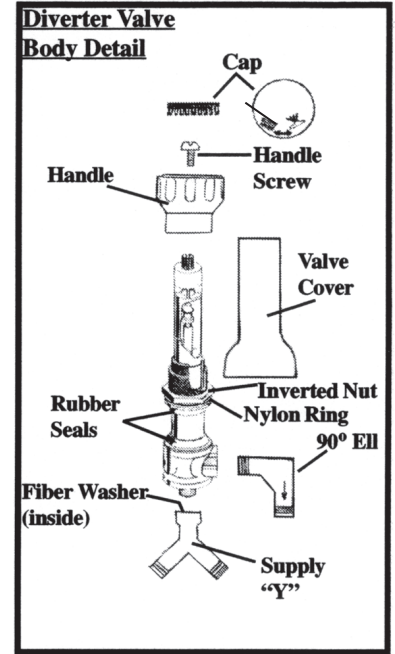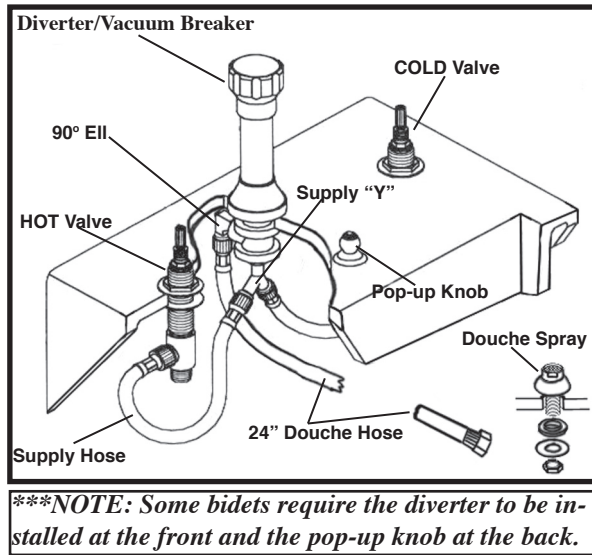

DIMENSION GUIDE									
Series	Height	Series	Height	Series	Height	Series	Height	Series	Height
1013	2 1/4"	2213	2"	3113	2 1/4"	3913	2 1/4"	4663*	1 7/8"
1113	2 1/4"	2263	2 1/2"	3163	2 1/2"	3963	2 1/4"	4713	2 1/4"
1213	2 1/4"	2313	2"	3213	2 1/4"	4013	2 1/8"	4813	2 5/8"
1313	2 5/8"	2363	2 1/2"	3263	2 1/2"	4063	2 1/8"	4863	2 5/8"
1363	2 1/2"	2413	2 5/8"	3313	2 1/4"	4113	2 1/4"	4913	2 5/8"
1413	2 5/8"	2513	2 5/8"	3413	2 1/2"	4163	2 1/4"	4963	2 5/8"
1463	2 1/2"	2613	2 5/8"	3463	2 1/2"	4213	2 1/2"	5013	2 1/2"
1513	2 5/8"	2713	2 1/4"	3513	2"	4263	2 1/2"	5063	2 1/2"
1613	2 5/8"	2763	2 1/4"	3563	2"	4313	2 1/2"	5113	2 5/8"
1713	2 5/8"	2813	2 1/4"	3613	2 1/4"	4413	2 1/2"	5163	2 1/4"
1813	2 5/8"	2863	2 1/4"	3663	2 1/4"	4463	2 1/2"		
1913	2 5/8"	2913	2 1/4"	3713	2 1/2"	4513	2 1/4"		
2013	2 5/8"	2963	2 1/4"	3813	2 1/2"	4563	2 5/8"		
2113	2 5/8"	3013*	1 7/8"	3863	2 1/2"	4613*	1 7/8"		

\*The escutcheon is used as the top lock nut on the valve. Discard the top valve nut.

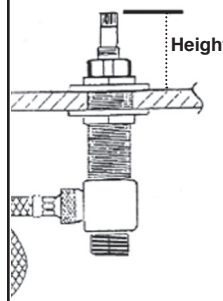

**INSTALLER**  
**Important Cleaning Notice**

Please refer to *Care & Maintenance Instructions* for complete cleaning instructions. **Never clean with abrasives, acids or detergents.** Wipe with soft, damp cloth.