

Legacy Brass, Inc

2- OR 3-VALVE TUB AND/OR SHOWER INSTALLATION SHEET

It is recommended that only licensed plumbers with knowledge of installing decorative plumbing products be employed to install Legacy Brass products. Failure to do so may cause product malfunction and needless additional cost.

INSTALLER NOTICE: Do not use plumbers' putty to install this product. The use of plumbers' putty will void the homeowner's finish warranty. We recommend using a clear silicone sealant and teflon tape around threaded parts.

1) For SHOWER ONLY 2-Valve Roughs:

Install a plug (not provided) in the lower outlet of the valve.

For TUB ONLY 2-Valve Roughs:



Install a plug (not provided) in the upper outlet of the valve.

2) Install the roughs at the desired height in the wall. Normal installation on a 3-valve rough has the tub spout approximately 4" above the top of the rim of the tub and the valve rough about 8" above the tub spout. Usual shower installations have the shower head positioned about 72" above the floor of the shower. (These dimensions are guides only. There are no absolute dimensions).


Hole diameters should be 1 1/4". **NOTE; To avoid having to order extensions later on, be sure to allow at least 2 5/8" of stem to protrude from the finished wall.** Stems and allthreads may be cut to achieve the correct dimensions when installing the trim (see Dimension Guide below).

3) Be sure the rough is strapped firmly to the framework. If galvanized pipe is being used, ground the pipe to prevent electrolosis between metals.

4) Install the trim parts to complete the installation. Stems and allthreads may be cut to achieve the correct dimensions when installing the trim.

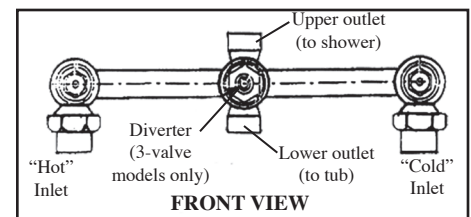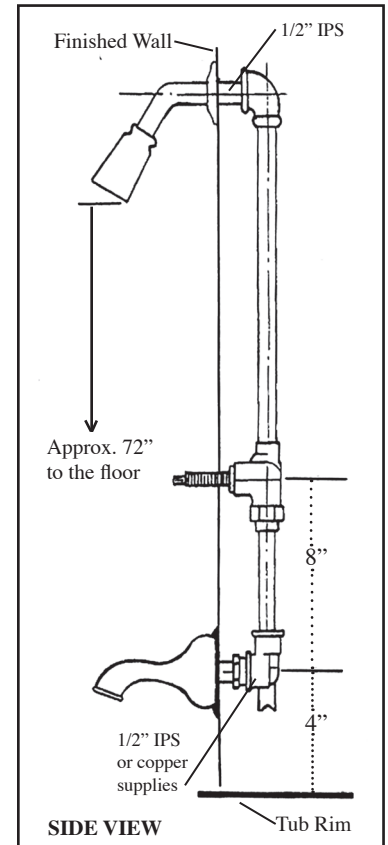

DIMENSION GUIDE									
Series	Height	Series	Height	Series	Height	Series	Height	Series	Height
1004,5,6	2 1/4"	2204,5,6	2"	3104,5,6	2 1/4"	3904,5,6	2 1/4"	4654,5,6	1 7/8"
1104,5,6	2 1/4"	2254,5,6	2 1/2"	3154,5,6	2 1/2"	3954,5,6	2 1/4"	4704,5,6	2 1/4"
1204,5,6	2 1/4"	2304,5,6	2"	3204,5,6	2 1/4"	4004,5,6	2 1/8"	4804,5,6	2 5/8"
1304,5,6	2 5/8"	2354,5,6	2 1/2"	3254,5,6	2 1/2"	4054,5,6	2 1/8"	4854,5,6	2 5/8"
1354,5,6	2 1/2"	2404,5,6	2 5/8"	3304,5,6	2 1/4"	4104,5,6	2 1/4"	4904,5,6	2 5/8"
1404,5,6	2 5/8"	2504,5,6	2 5/8"	3404,5,6	2 1/2"	4154,5,6	2 1/4"	4954,5,6	2 5/8"
1454,5,6	2 1/2"	2604,5,6	2 5/8"	3454,5,6	2 1/2"	4204,5,6	2 1/2"	5004,5,6	2 1/2"
1504,5,6	2 5/8"	2704,5,6	2 1/4"	3504,5,6	2"	4254,5,6	2 1/2"	5054,5,6	2 1/2"
1604,5,6	2 5/8"	2754,5,6	2 1/4"	3554,5,6	2"	4304,5,6	2 1/2"	5104,5,6	2 5/8"
1704,5,6	2 5/8"	2804,5,6	2 1/4"	3604,5,6	2 1/4"	4404,5,6	2 1/2"	5154,5,6	2 1/4"
1804,5,6	2 5/8"	2854,5,6	2 1/4"	3654,5,6	2 1/4"	4454,5,6	2 1/2"		
1904,5,6	2 5/8"	2904,5,6	2 1/4"	3704,5,6	2 1/2"	4504,5,6	2 1/4"		
2004,5,6	2 5/8"	2954,5,6	2 1/4"	3804,5,6	2 1/2"	4554,5,6	2 5/8"		
2104,5,6	2 5/8"	3004,5,6	1 7/8"	3854,5,6	2 1/2"	4604,5,6	1 7/8"		

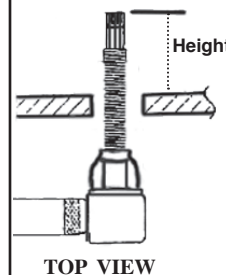

**INSTALLER
Important Cleaning Notice**

Please refer to *Care & Maintenance Instructions* for complete cleaning instructions. **Never clean with abrasives, acids or detergents.** Wipe with soft, damp cloth.